

5 Phillips Street Thebarton SA 5031 ph: (08) 82442844 fax (08) 82442955 sales@automatedcontrols.com.au

## DELTA DORE T2 + 2C TO HEVAC HTC-4 TERMINAL TRANSPOSITION DETAILS

DESCRIPTION		Series 2	
<i>گ</i> ر^ ×	DESCRIPTION	\$\times_C	DESCRIPTION
1	240 VOLT AC NEUTRAL	N	240 VOLT AC NEUTRAL
2	240 VOLT AC ACTIVE	Α	240 VOLT AC ACTIVE
3	NORMALLY CLOSED STAGE 1 (HEAT)	5	NORMALLY CLOSED STAGE 1(HEAT) CAN BE USED FOR REVERSING VALVE FOR COOL
4	NORMALLY OPEN STAGE 1 (HEAT)	3	NORMALLY OPEN STAGE 1(HEAT)
5	COMMON STAGE 1 (HEAT)	4	COMMON STAGE 1 (HEAT)
6	NORMALLY CLOSED STAGE 2 (HEAT)		NOT APPLICABLE ON HEVAC HTC-4
7	NORMALLY OPEN STAGE 2 (HEAT)	2	NORMALLY OPEN STAGE 2 (HEAT)
8	COMMON STAGE 2 (HEAT)	1	COMMON STAGE 2 (HEAT)
9	NORMALLY CLOSED STAGE 1 (COOL)	8	NORMALLY CLOSED STAGE 1(HEAT) CAN BE USED FOR REVERSING VALVE FOR HEAT
10	NORMALLY OPEN STAGE 1 (COOL)	6	NORMALLY OPEN STAGE 1 (COOL)
11	COMMON STAGE 1 (COOL)	7	COMMON STAGE 1 (COOL)
12	NORMALLY CLOSED STAGE 2 (COOL)		NOT APPLICABLE ON HEVAC HTC-4
13	NORMALLY OPEN STAGE 2 (COOL)	10	NORMALLY OPEN STAGE 2 (COOL)
14	COMMON STAGE 2 (COOL)	9	COMMON STAGE 2 (COOL)
15	SENSOR INPUT	В	SENSOR INPUT
16	SENSOR INPUT	М	SENSOR INPUT COMMON