

PART NUMBER	DESCRIPTION
	CONTROLLERS
HCP-7-F	CO Controller, 7 Input, 4xDO, 2xAO Fixed CO Sensor input of 100 PPM (Minimum 2 Sensors)
HCP-7	CO Controller, 7 Input, 4xDO, 2xAO Universal CO Sensor Adjustable PPM
ENDEAVOUR	Multistage Controller
HHC-2	Humidity Controller
HTC-2	1 Heat/1 Cool Temperature Controller
HTC-2H	1 Heat/1 Cool Controller with Modulating Heating Output
HTC-2HC	1 Heat/1 Cool Controller with Modulating Heating and Cooling Outputs
HTC-3	1 Heat/1 Cool Temperature Controller with LED Room Temperature Display and Fan Relay
HTC-4	2 Heat/2 Cool Temperature Controller
HTC-43S	3 Heat/3 Cool Temperature Controller
HTC-4A	3 Heat/2 Cool Temperature Controller
HTC-4B	2 Heat/3 Cool Temperature Controller
HTC-4D	2 Heat/3 Cool Control with Economy Cycle Comparitor
HTC-4DE	2 Heat/3 Cool Controller with Modulating Economy Cycle Comparitor
HTC-4E	2 Heat/3 Cool Controller with Modulating Economy Cycle Output
HTC-4H	2 Heat/2 Cool Controller with 0-10 Heating
HTC-4YT	HTC-4 Suit Modulating with Compressor 0..10VDC
HTC-5	2 Heat/2 Cool Temperature Controller with LED Room Temperature Display and Fan Relay
RSC-2	Wall Mount Room Sensor/Controller with LED Room Temperature Display and Fan Relay
MIMIC	Temperature Controller 2 Stage On/Off Heat & Cool + 0-10 VDC Heat & Cool O/P's

PART NUMBER	DESCRIPTION
	AUXILIARY PLUG IN CARDS SUIT HTC3 & HTC5
HAX-53R	On/Off Auxiliary Plug in Card
HAX-53Y	Modulating Auxiliary Plug in Card

PART NUMBER	DESCRIPTION
	SLAVE CONTROLLERS
EXP-7	7 Input Expansion Module
HRC-4	2 Heat/2 Cool Staging Relay
HRC-43S	3 Heat/3 Cool Staging Relay
HRC-4A	3 Heat/2 Cool Staging Relay
HRC-4B	2 Heat/3 Cool Staging Relay
HRC-4D	2 Heat/3 Cool Staging Relay with Economy Cycle Comparitor

PART NUMBER	DESCRIPTION
	SLAVE CONTROLLERS CONTINUED
HRC-4D-DIG	2 Heat/3 Cool Staging Relay with Economy Cycle Comparitor
HRC-4DE-DIG	2 Heat/3 Cool Staging Relay with Modulating Economy Cycle Comparitor
HRC-4E	2 Heat/2 Cool Staging Relay with Modulating Economy Cycle Output
HRC-4DE	2 Heat/3 Cool Staging Relay with Modulating Economy Cycle Output Comparitor
HRC-4DIG	2 Heat/2 Cool Staging Relay
PART NUMBER	DESCRIPTION
	ELECTRONIC THERMOSTATS
RTC2H	2 Stage Heating Room Thermostat
RTC3C	Electronic Room Thermostat Domestic
RTC3V	Electronic Room Thermostat Commercial
DSC-2	Duct Mount Sensor/Controller
RTC4DWIFI	Domestic 2Heat/2Cool Thermostate WIFI
RTC10	Heat or Cool Electronic SPST 3 Wire Thermostat
RTC30	1 Heat/1 Cool Auto Changeover Thermostat
PART NUMBER	DESCRIPTION
	ROOM SENSORS
HGS-N02	Hevac N02 Sensor (Diesel)
HGS-CO	Hevac Gas Sensor CO 0..100ppm
DSAO	Duct Sensor Active Output
SDT-D	Duct Mounted Temperature Sensor suits Hevac Controllers with Temperature Display 2 Wires
SDT-H	Duct Mounted Temperature Sensor suits Hevac Controllers without Temperature Display 2 Wires
SOT-H	Outside Air Sensor
SOT-D	Outside Air Sensor to suit Digital Controller
SPA	Remote Set Point Adjuster suits Hevac Controllers without Temperature Display
SPA-D	Remote Set Point Adjuster suits Hevac Controllers with Temperature Display
SRT-D	Non Adjustable Wall Mount Temperature Sensor suits Hevac Controls with Temperature Display 2 Wire
SRT-DSP	Adjustable Wall Mount Temperature Sensor suits Controllers with Temperature Display 3 Wires
SRT-DB	Non Adjustable Wall Mount Temperature Sensor comes with Bypass Switch 2 Wires Suits HTC Digital-LCD only
SRT-DSPSW	Adjustable Wall Mount Temperature Sensor comes with On/Off/Bypass Switch 3 Wires Suits HTC Digital-LCD only
SRT-DSPSW.B	Adjustable Wall Mount Temperature Sensor comes with On/Off/Bypass Switch suits Hevac HTC Digital Series Temperature Controllers
SRT-DSPSW.V	Adjustable Wall Mount Temperature Sensor comes with On/Off/Vent Switch suits Hevac HTC Digital Series Temperature Controllers
SRT-DSW	Non Adjustable Wall Mount Temperature Sensor comes with On/Off/Bypass Switch 2 Wires suits HTC Digital-LCD only
SRT-DSW.V	Non Adjustable Wall Mount Temperature Sensor comes with On/Off/Vent Switch suits Hevac HTC Digital Series Temperature Controllers

PART NUMBER	DESCRIPTION
	ROOM SENSORS CONTINUED
SRT-H	Non Adjustable Wall Mount Temperature Sensor suits Hevac Controllers without Temperature Display 2 Wires
SRT-HLCD	Non Adjustable Wall Mount Temperature Sensor comes with LCD Display
SRT-HSP	Adjustable Wall Mount Room Temperature Sensor suits Hevac Controllers without Temperature Display 2 Wires
SRT-HSPLCD	Adjustable Wall Mount Temperature Sensor comes with LCD Display suits Hevac Controllers without Temperature Display
SRT-HSPSWLCD	Adjustable Wall Mount Temperature Sensor comes with On/Off Switch and LCD Display suits Hevac Controllers without Temperature Display
SRT-HSW	Non Adjustable Wall Mount Temperature Sensor comes with On/Off Switch suits Hevac Controllers without Temperature Display
SRT-LCD	LCD Room Temperature Display Only (Does not have an inbuilt sensor)
SRTA-D	Non Adjustable Averaging Room Sensor 2 Wires suits Hevac Controllers with Temperature Display
SRTA-DSP	Adjustable Averaging Room Sensor suits Hevac Controller with Temperature Display
SRTA-DSPSW	Adjustable Averaging Room Sensor suits Hevac Controller with Temperature Display comes with Switch
SRTAAA-D	Non Adjustable Triple Averaging Room Sensor suits Hevac Controllers with Temperature Display
SRTA-H	Non Adjustable Averaging Room Sensor 2 Wires suits Hevac Controllers without Temperature Display
SRTA-HSP	Adjustable Averaging Room Sensor suits Hevac Controller without Temperature Display
SRTA-HSPSW	Adjustable Averaging Room Sensor suits Hevac Controller comes with Switch
SRTAAA-H	Non Adjustable Triple Averaging Room Sensor suits Hevac Controllers without Temperature Display
OSAO	0-10v O/P Outside Air Wall Mount Temperature Sensor
RSOA	0-10v DC O/P Room Temperature Sensor

PART NUMBER	DESCRIPTION
	LAMP TEST DIODE MODULES
LT-7	7 Way Lamp Test Module
LT-7HS	7 Input Hi Select Module
LT-7AV	7 Way Averaging Module
LT20	20 Way Lamp Test Module
LTM10	10 I/P Lamp Test Module
	I/P SIGNAL SELECTOR MODULES
LT20-AV	Averaging Signal Selector (Resistors)
LT20-HS	High Signal Selector (Diodes)

PART NUMBER	DESCRIPTION
	SWITCHING (IO) MODULE
RRM3	3 Stage Relay Module (Room Sensor Housing)
SEZ-DUAL	2 Stage Step Controller
SEZ-QUAD	4 Stage Step Controller

SEZ-HAUX HS	Multi I/O 0-10v Expansion Module (Three Models HS, LS, AV all the same price)
PART NUMBER	DESCRIPTION
	ELECTRONIC AIR FLOW SENSOR
HAFS	Hevac Electronic Air Flow Sensor
PART NUMBER	DESCRIPTION
	ELECTRONIC HI/LO LIMIT T/STAT
HLD1	Fresh Air Hi Limit Electronic T/Stat Surface Mount
HLW1	Fresh Air Hi Limit Electronic T/Stat Surface Mount
PART NUMBER	DESCRIPTION
	TIMERS
ACDO-24v	Short Duration Timer 30 Sec. ~ 5 min. Adjustable Delay On or Off 24v
ACDO-240v	Short Duration Timer 30 Sec. ~ 5 Min. Adjustable Delay On or Off 240v
HRT-24v	30 Minute ~ 2 Hour Delay Off Timer 24v
HRT-240v	30 Minute ~ 2 Hour Delay Off Timer 240v
HRT-RF24v	2 Hour Run Timer 24v Run/Fault
HRT-RF240v	2 HOUR RUN TIMER 240v RUN/FAULT
HUdT-24v	Universal Programmable Delay Timer 1 sec. ~ 16 hour 24v
HUdT-240v	Universal Programmable Delay Timer 1 sec. ~ 16 hour 24v
PART NUMBER	DESCRIPTION
	AUXILIARY ITEMS
AWIF-24v	24vAC Powered12vDC Interface
AWIF-240v	240vAC Powered 12vDC Interface
NWIF-24v	24vAC Powered 12vDC Interface Responds to Switched 12 VDC Negative Input
NWIF-240v	240v AC Powered 12vDC Interface Responds to Switched 12 VDC Negative Input
ECF-1	EC Fan Start/Stop & Minimum / Maximum Speed Module
FIGM6	6 X DPDT 24v AC Relay Fire Mode Interface
HIM-5	240-24v Relay Interface Module
HIM-5-20A	Hevac Interface 20AMP
HIM-FANSPD	3 Speed Fan Interface 20AMP
HMI-EZS	7" Master Control Panel
HVS-2	VSD Sequencer
HYSA4	0.10v Signal Booster
LT-MECF-24v	Manual EC Fan Speed or Damper Positioner Control Module 24v

LT-MECF-240v	Manual EC Fan Speed or Damper Positioner Control Module 240v
PART NUMBER	DESCRIPTION
	AUXILIARY ITEMS CONTINUED
OPCC	Output Capacity Control Digital to Analog Signal Convertor 24v
YOP4-24v	4 x0.10v DC Signal Module 24v
YOP4-240v	4 X 0-10v DC Signal Module 240v
PART NUMBER	DESCRIPTION
	DELAY ON TIMER
HDT-6	Multistage (6 Stage) Delay on Timer
	CONTROLLER
HTC-BASIC-24v	HTC-Basic 24v
HTC-BASIC-240v	HTC-Basic 240v